

1) Download the software package to the DBBC and unpack it

2) Copy files

`dbb2_pfb_v16_010916_1_adbX.bit` -> C:\DBBC\_CONF\FilesDBBC (Choose adbX = 1 or 2 depending on your ADB version)

`dbbc_poly_config_file_16.txt` -> C:\DBBC\_CONF

`adb3l_reset.exe` -> C:\DBBC\bin

`DBBC2 Control PFB v16_010916.exe` -> Desktop

3) Edit configuration file

- Consult the DBBC documentation about the appropriate settings
- The last two lines are new to V16 and can be left unchanged.

4) Calibrate the DBBC2

- For performing the calibration follow these [instructions](#)
- Update your configuration file (`dbbc_poly_config_file_16.txt`) with the numbers obtained from the calibration